

## 1 Requirements

The Mate integration works with any exacqVision system. This document assumes that the exacqVision server and the Mate server are both installed and running.

Minimum software requirements:

- exacqVision version 4.2 or later
- Mate version 4.3.2.29065 or later

## 2 Configuration

1. Obtain the IP address of the exacqVision server.
2. On the exacqVision server, create a username and password with Power User privileges. Mate software will log in to the exacqVision server with this account to request video and actuate soft triggers.
3. Use the exacqVision–Mate integration document (in the VCA shortcuts folder on the Mate server Desktop) to configure Mate for use with the exacqVision system.
4. Mate Software can now perform video analytics on any imported exacqVision camera in the Mate system.
5. The Mate software sends a soft trigger to the exacqVision system to be used for recording video or creating event links. (See “Event Linking” in the exacqVision user manual chapter 4 for information on configuring soft triggers.)

The following illustration shows the Mate software running on exacqVision cameras.

